



Dynex Wireless Optical Mouse

DX-WLMSE

USER GUIDE

Dynex DX-WLMSE Wireless Optical Mouse

Contents

Important safety instructions.....	2
System requirements	2
Package contents	3
Features	3
Setting up the mouse.....	4
Using Mouse Suite.....	4
Legal notices	15
One-year limited warranty	17

Important safety instructions

- Batteries may explode or leak if they are improperly recharged, inserted, disposed of in fire, or mixed with used batteries or different battery types.
- There is a risk of explosion if a battery is replaced incorrectly.
- Dispose of used batteries according to local regulations.

System requirements

- Microsoft Windows 2000, Windows XP, Windows Vista, or Windows 7
- Available USB port
- CD or DVD drive

 
 
Package contents

This package contains the following:

- Wireless optical mouse
- USB wireless receiver
- Mouse driver CD
- AAA batteries (2)
- Extension cable
- Quick Setup Guide

Features

Your Tilt Scroll Wheel is designed for four-way navigation. You can view whole documents by turning the scroll wheel up, down, left, and right.

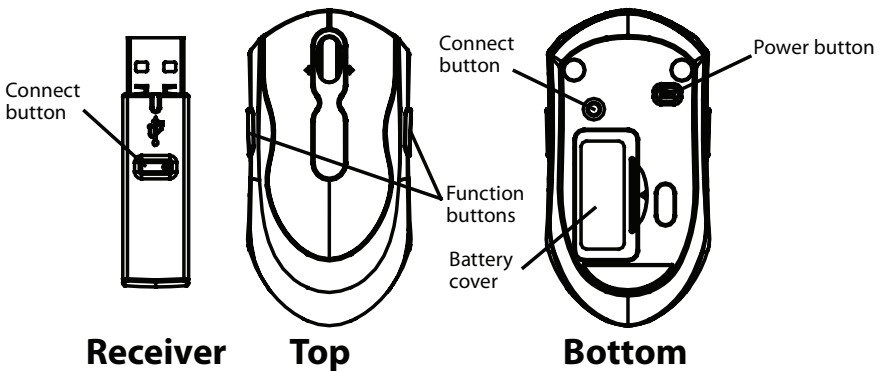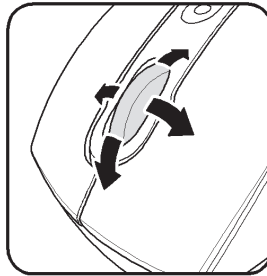

Setting up the mouse

- To set up the mouse:**
- Insert the enclosed CD into your computer's disk drive and follow the on-screen instructions to install your driver.

Installing the batteries

- To install the batteries:**
- 1 Open the battery cover.
 - 2 Install the AAA batteries.
 - 3 Close the battery cover, then slide the power button to **ON**.

Saving power




To extend your battery life, you can turn off the mouse power by sliding the mouse power button to **OFF**.

Connecting your mouse

- To set up the mouse:**
- Plug the USB receiver into your computer's USB port. Your wireless optical mouse is ready to use.

Using Mouse Suite

Understanding the Mouse Suite icons

	The mouse icon indicates the USB receiver and mouse are connected.
	A red icon indicates the mouse battery is low.
	A white icon indicates the battery is ok.

Accessing Mouse Suite



To access Mouse Suite:

- Double-click the Mouse icon in the system tray or right-click to view the context menu, then click **Adjust Mouse Properties**.
- Or**, If the mouse icon is not in your system tray, click **Start**, then **Settings**, then **Control Panel**, then **Dynex Mouse**.

About the Mouse Suite dialog

The main dialog is divided into six tabs. Click each tab to view related settings.

Under each tab there are three common buttons:

 
- Click **OK** to save your settings and close the dialog.
- Click **Cancel** to exit this dialog without saving.
- Click **Apply** to have your changes take effect without closing this dialog.

Configuring your mouse buttons

Click the **Buttons** tab to view an image of your mouse and a description of button functions.

To assign function to buttons:

- 1 Open the menu next to the button you want to customize in the button overview screen.
- 2 Select the function you want to assign to the button from the list.
- 3 Click **Apply** to start using this function, or click **Cancel** to exit the Mouse Suite without making changes. **Or**, Click the **Button** menu. Select the button you want to customize from the list.
- 4 Click the **Function** menu. Select the function you want to assign to the button from the list.
- 5 Click **Apply** to start using this function, or click **Cancel** to exit the Mouse Suite without making changes.

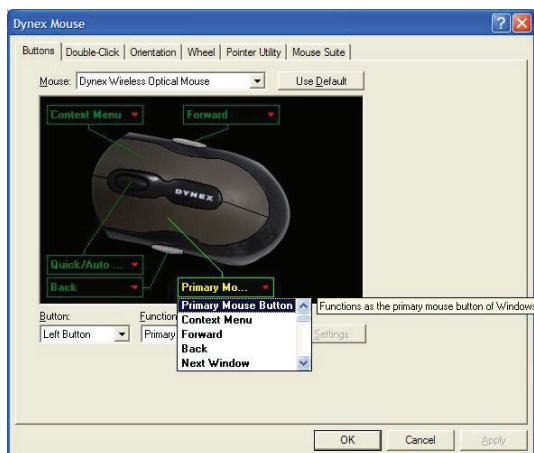

Setting the HyperGrid

The HyperGrid function, when assigned to one of the buttons on your mouse, opens a menu with easy access to nine of the most commonly used functions.

To set the Hypergrid

- 1 Click and hold the button to open the menu.
- 2 Move the pointer to the function you need and release the button to select.
- 3 Press the button again to exit the selected function.




A	Minimize active window
B	Maximize active window
C	Close active window
D	Vertical scroll
E	Resize active window
F	Horizontal scroll
G	Open Start menu
H	Make next window active

Assigning Hyperlink

The Hyperlink function, when assigned to one of the buttons on your mouse, opens up a specified program.

To assign Hyperlink

 - 1 Click **Settings**.
- 2 Enter or browse for the program you want to open. Add a description if you want.
- 3 Click **OK**, then click **Apply** on the main screen.

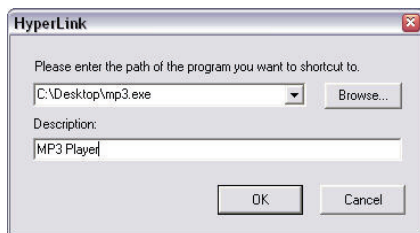

When you click the assigned button, the program you have specified opens.

Assigning Magnifier function

The Magnifier is a unique feature of your mouse. It lets you zoom in on a specific area of the screen for viewing in closer detail.

To assign Magnifier function

 
- 1 Check the **Magnifier** checkbox.
- 2 Assign **Magnifier** to one of the buttons.
- 3 Click **Apply** to have your changes take effect.

Slowing down the double-click speed

Many items in Windows require that you click the left mouse button twice in quick succession to be activated. This is called a 'double-click'. If you experience difficulty double-clicking on items, the time between clicks may be too short.

To slow down the double-click


- 1 Click the **Double-Click** tab to set the delay between clicks.
- 2 Double-click on the icon in the test area. If the icon does not animate, you need to slow down the double click.

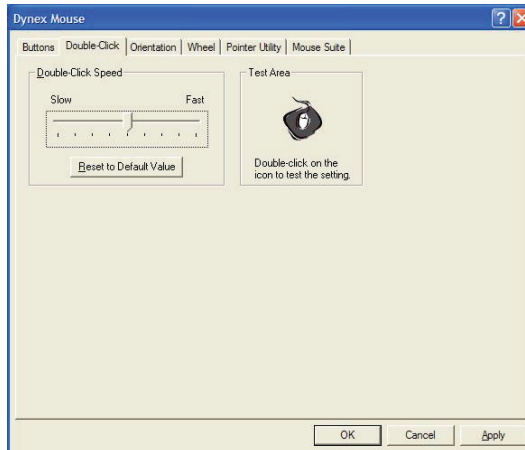

- 3 Click and drag the slider between **Slow** and **Fast** to set the double-click speed, then click **OK** or **Apply**.

Setting up Orientation

 You can set the desired angle to hold your mouse.

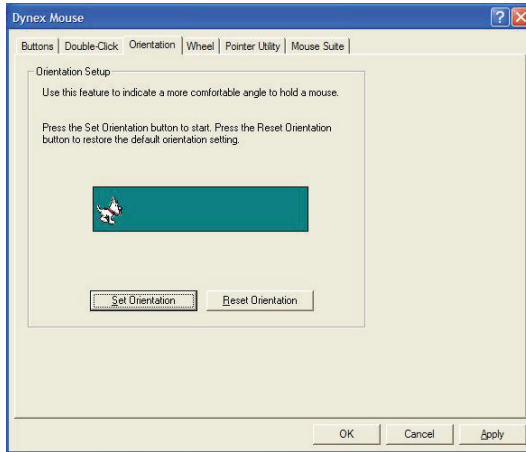


To set up the orientation:

- 1 Hold the mouse at the angle you want to use.
- 2 On the **Orientation** tab, click **Set Orientation**. Move the mouse to your right and make the animated dog run across the screen. The mouse orientation is now matched to the angle you held the mouse.

Setting up your tilt scroll wheel

To set up your tilt scroll wheel:

 
- 1 Click the Wheel tab to configure how the scroll and tilt wheel on your mouse is used in **Windows**.

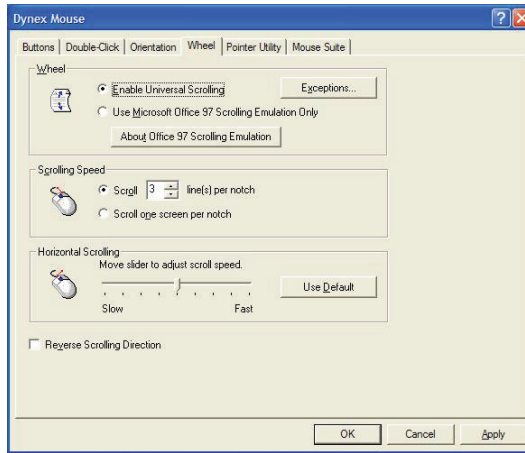


- 2 Click **Enable Universal Scrolling** or **Use Microsoft Office 97 Scrolling Emulation only**.
- 3 If you select universal scrolling, click **Exceptions** to configure applications in which universal scrolling will not be available.
- 4 Click **Apply** to have your changes take effect.

To configure Exceptions:

 - 1 Click **Exception** in the **Wheel** tab to display a list of applications that use Microsoft Office 97 Scrolling Emulation regardless of whether universal scrolling is enabled.

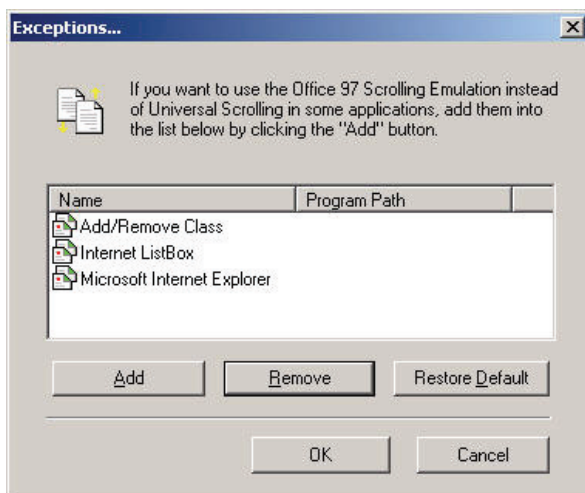

 - 2 Click an item in the list, then click **Remove** to delete that item. **Or**, Click **Add**, then click **Browse** to select the application to add to this list.

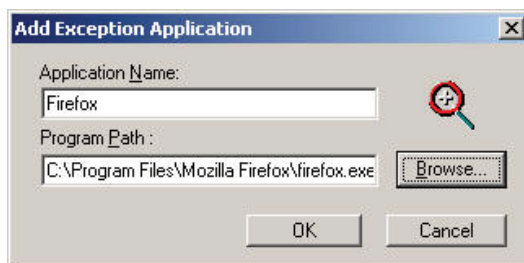

Assigning wheel functions

You can assign a separate function to the wheel button itself, apart from the scroll function.

To assign wheel function:

- 1 Select **Quick/Auto Scroll Control** to set the button control scroll speed when pressed. **Or**, select **Button Function** from the drop down menu to assign to the wheel button.
- 2 Click **OK** to have your changes take effect.

Setting scrolling speed:

You can specify the speed at which the window scrolls when using the scroll wheel.

 
To set up scrolling

- Click **Scroll x lines per notch** to set the number of lines to scroll when the scroll wheel is moved one notch. Specify the number of lines with the up and down arrows.
- Or**, click **Scroll one screen per notch** to scroll the entire window when the scroll wheel is moved one notch (example: page up/down).

Configuring pointer utility

To configure pointer utility:


- 1 Click the **Pointer Utility** tab to configure additional pointer functionality.

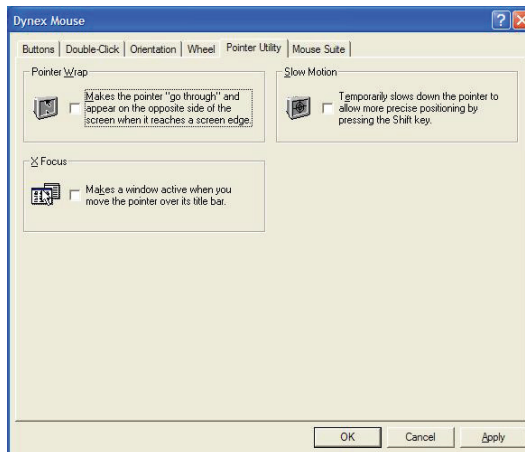

- 2 Select the function(s) to apply:
 - **Pointer Wrap**— Lets the pointer exit one side of the screen and appear on the opposite side.
 - **Slow Motion**— Lets the pointer slow down when the Shift key is held down.
 - **X Focus**— Lets the window under the pointer become the active window.
- 3 Click **OK**.

Activating Mouse Suite settings

 Click the **Mouse Suite** tab to add the Mouse Suite icon to the system tray or uninstall the Mouse Suite software.

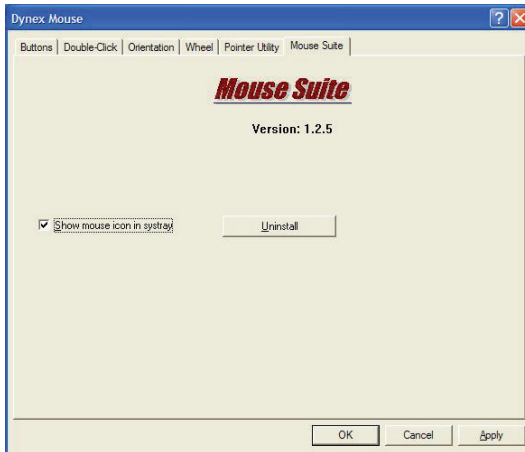

To add the Mouse Suite icon to system tray:

- 1 Check **Show mouse icon in system tray** to display the icon in the system tray.
- 2 Click **OK**.

Uninstalling the Mouse Suite

To uninstall the Mouse Suite:

- 1 Click **Uninstall**. A confirmation message appears.
- 2 Click **Yes** to uninstall or **No** to cancel.

Cleaning the mouse

Wipe the bottom of the mouse with a damp, lint-free cloth.

Re-linking your mouse

If the connection between your mouse and receiver is broken, you can re-link your mouse with the receiver.

To re-link your mouse with the receiver:

- 1 Press the **Connect Button** on the receiver. The LED indicator flashes.
- 2 On the bottom of your mouse, press the **Connect Button**. Your mouse is linked with the receiver, and the receiver's LED indicator turns off.
- 3 If the mouse does not link with the receiver, repeat steps 1 and 2.

Note: The LED indicator on the USB wireless receiver turns red when your mouse battery becomes weak. Change the batteries immediately.

Legal notices

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Canada ICES-003 Statement

This Class B Digital apparatus complies with Canadian ICES-00

Copyright

© 2009 Dynex. DYNEX and the DYNEX logo are trademarks of Best Buy Enterprise Services, Inc. Other brands and product names are trademarks or registered trademarks of their respective holders. Specifications and features are subject to change without notice or obligation.

For service and support call (800) 305-2204.

One-year limited warranty

Dynex Products ("Dynex") warrants to you, the original purchaser of this new **DX-WLMSE** ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period"). This Product must be purchased from an authorized dealer of Dynex brand Products and packaged with this warranty statement. This warranty does not cover refurbished product. If you notify Dynex during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

How long does the coverage last?

The Warranty Period lasts for one year (365 days) from the date you purchased the Product. The purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of products and parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 25 inches or larger, call 1-888-BESTBUY. Call agents will diagnose and correct the issue over the phone or will have an Dynex-approved repair person dispatched to your home.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Dynex to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For customer service please call 1-800-305-2204

www.dynexproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2009 Best Buy Enterprise Services, Inc.

All rights reserved. DYNEX is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



www.dynexproducts.com (800) 305-2204

© 2009 Best Buy Enterprise Services, Inc. All rights reserved.
DYNEX is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries.
All other products and brand names are trademarks of their respective owners.

Distributed by Best Buy Purchasing, LLC
7601 Penn Ave. South, Richfield, MN 55423 U.S.A.

09-0742
ENGLISH